EVACUATION PLAN

PATTY ICE ARENA, FS413

FLOOR 2

CALL 911



IN CASE OF FIRE, PULL FIRE ALARM, USE EXIT STAIRS, CLOSE ALL WINDOWS AND DOORS, DO NOT USE ELEVATOR.




FIRE ALARM WILL SOUND AS CHIRPING ELECTRICAL HORN, STROBE LIGHT WILL FLASH.

PERSONS WITH DISABILITIES

CALL 911. REPORT YOUR LOCATION. PROCEED TO THE NEAREST EXIT OR EXIT STAIRWELL AND AWAIT ASSISTANCE.



EVACUATION SITE

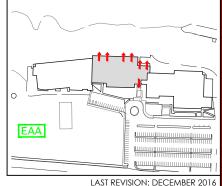

SYMBOL LEGEND



EMERGENCY ASSEMBLY AREA



ELEVATOR



FIRE EXTINGUISHER



STAIRS



YOU ARE HERE

ALARM PULL STATION

FOR REVISIONS OR COPIES CONTACT DDC DRAFTING AT UAF-DDC-CADD@ALASKA.EDU